



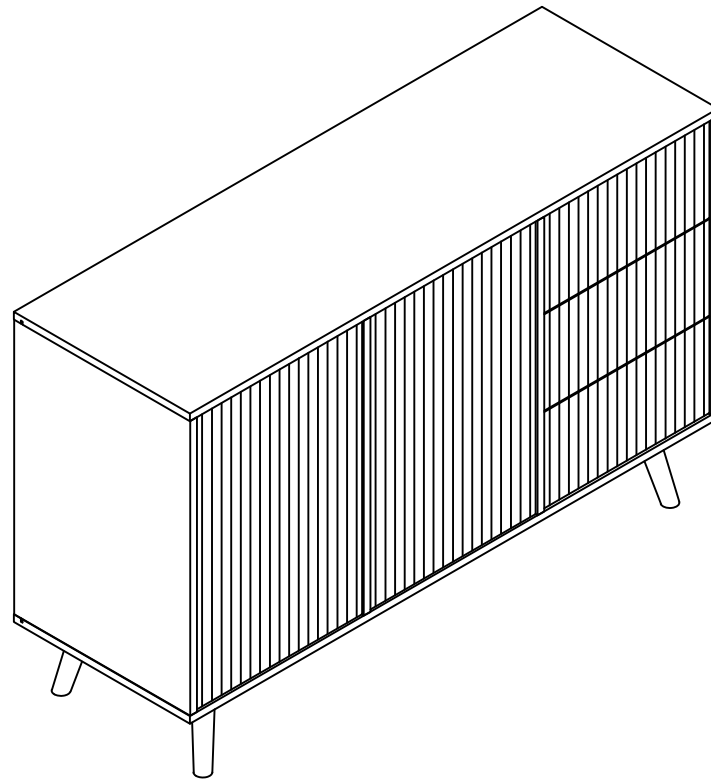

APSD059

- ES: Escanea este código QR para ver las instrucciones actualizadas y posibles vídeos tutoriales.
EN: Scan QR code for updated manual and possible tutorial videos.
FR: Scannez ce code QR pour voir les instructions mises à jour et les vidéos possible.
IT: Scannerizzate il codice QR per vedere le istruzioni aggiornate ed eventuali tutorial video.
PT: Faça o scan deste código QR para obter instruções actualizadas e possíveis vídeos.
NL: Scan de QR code voor de actuele montagehandleiding en eventuele video met uitleg.
DE: Scannen Sie den QR-Code für die aktuelle Montageanleitung und eventuelle Video-Tutorials.

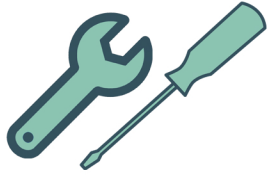



EN. Install the Wall Anchor Mounting Point It's mandatory to anchor it to the wall (either at the top or bottom of the furniture).

ES. Dispositivo antivuelco. Es obligatorio anclarlo a la pared (en la parte superior o inferior del mueble).

















FR. Il doit être fixé au mur (en haut ou en bas du meuble).

IT. Dispositivo antiribaltamento. È obbligatorio fissarlo alla parete (nella parte superiore o inferiore del mobile).


PT. Dispositivo antitombamento .É obrigatório fixá-lo à parede (na parte superior ou inferior do móvel).

NL. Het is verplicht om het aan de muur te verankeren (aan de boven- of onderkant van het meubel).

DE. Es ist obligatorisch, es an der Wand zu verankern (am oberen oder unteren Teil des Möbel).

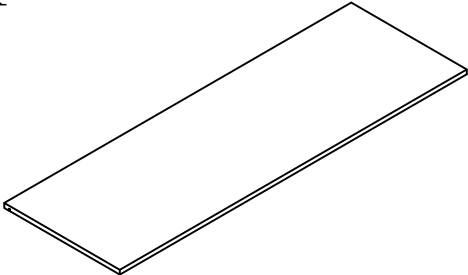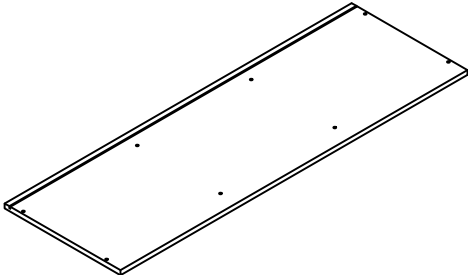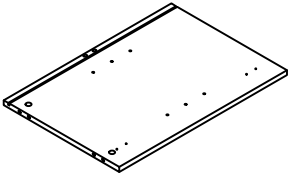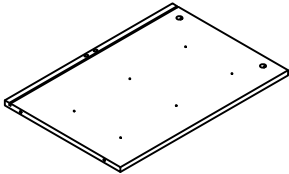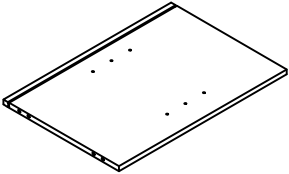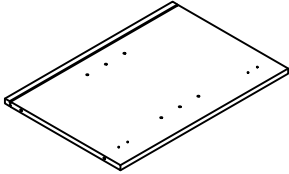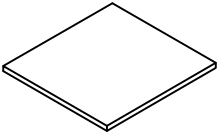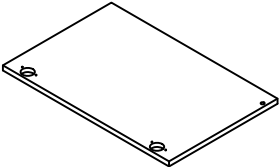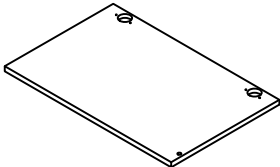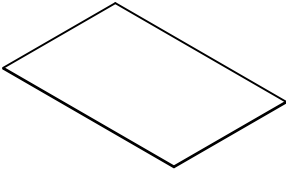1  1200*400 1PS	2  1200*400 1PS	3  580*400 1PS	4  580*400 1PS
5  580*400 1PS	6  580*400 1PS	7  377*358 2PS	8  379*80 2PS
9  575*375 1PS	10  575*375 1PS	11  190*375 3PS	12  324*130 3PS
13  300*130 3PS	14  300*130 3PS	15  334*294 3PS	16  590*387.5 3PS

1

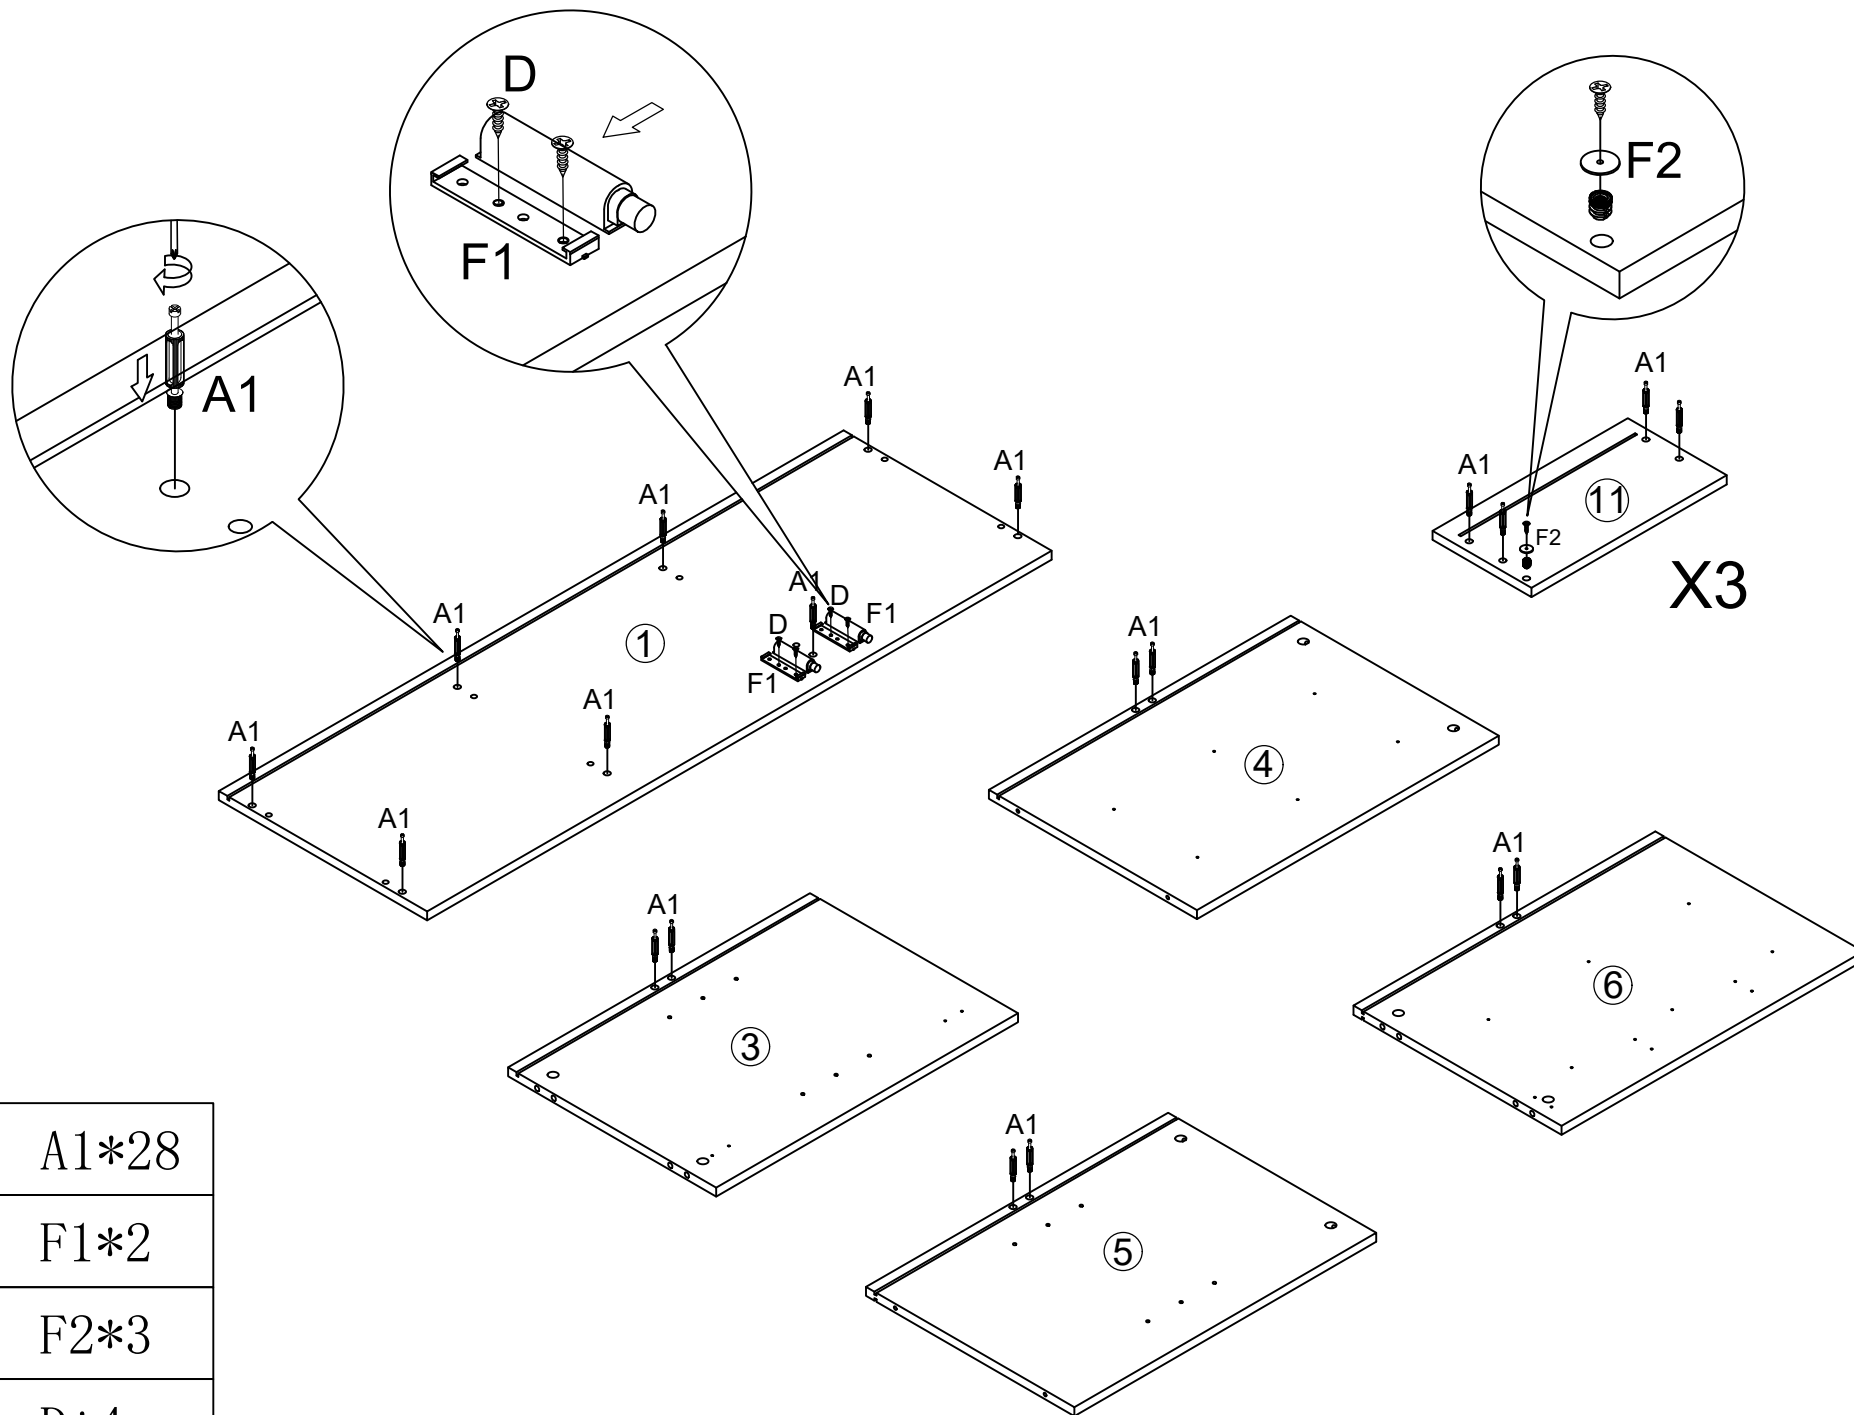

X3



A1*28



F1*2




F2*3






D*4

2

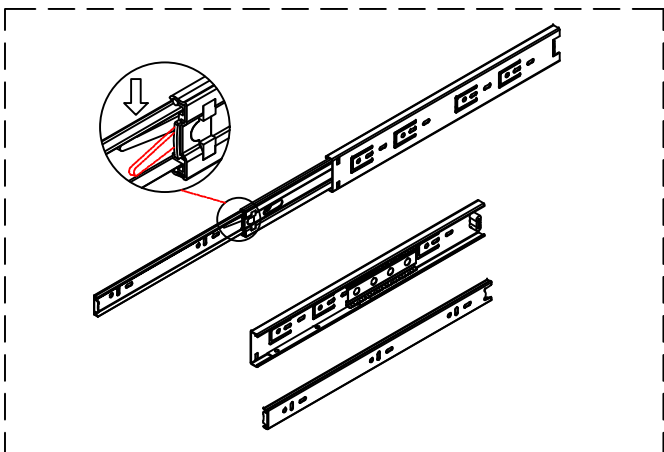

The guide rail is undivided into left and right sides.

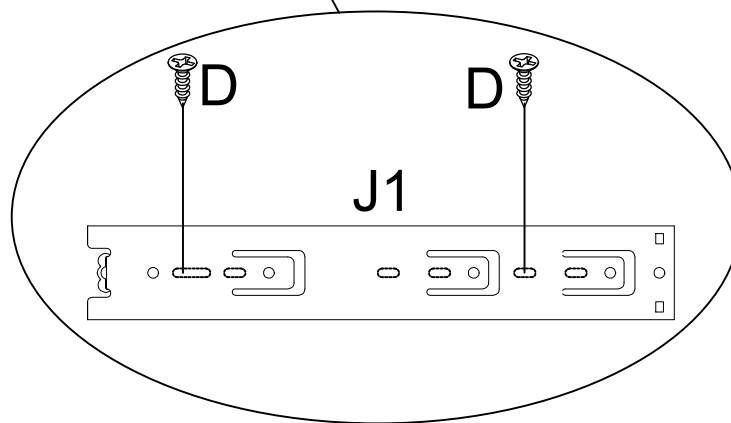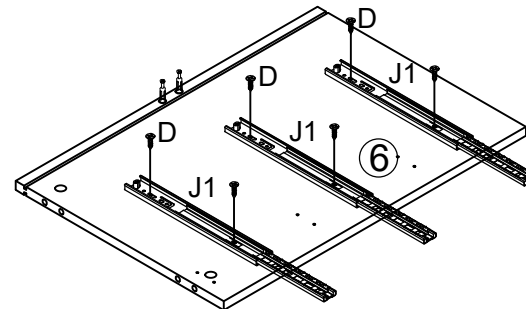
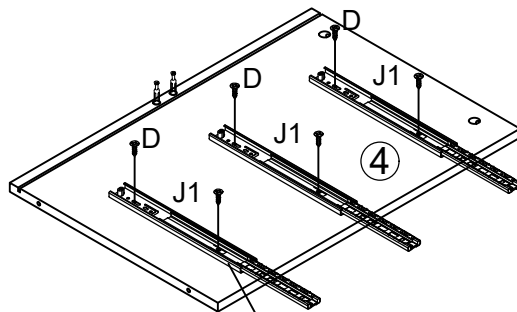


D*12




J1*3


3

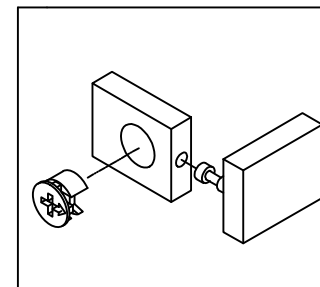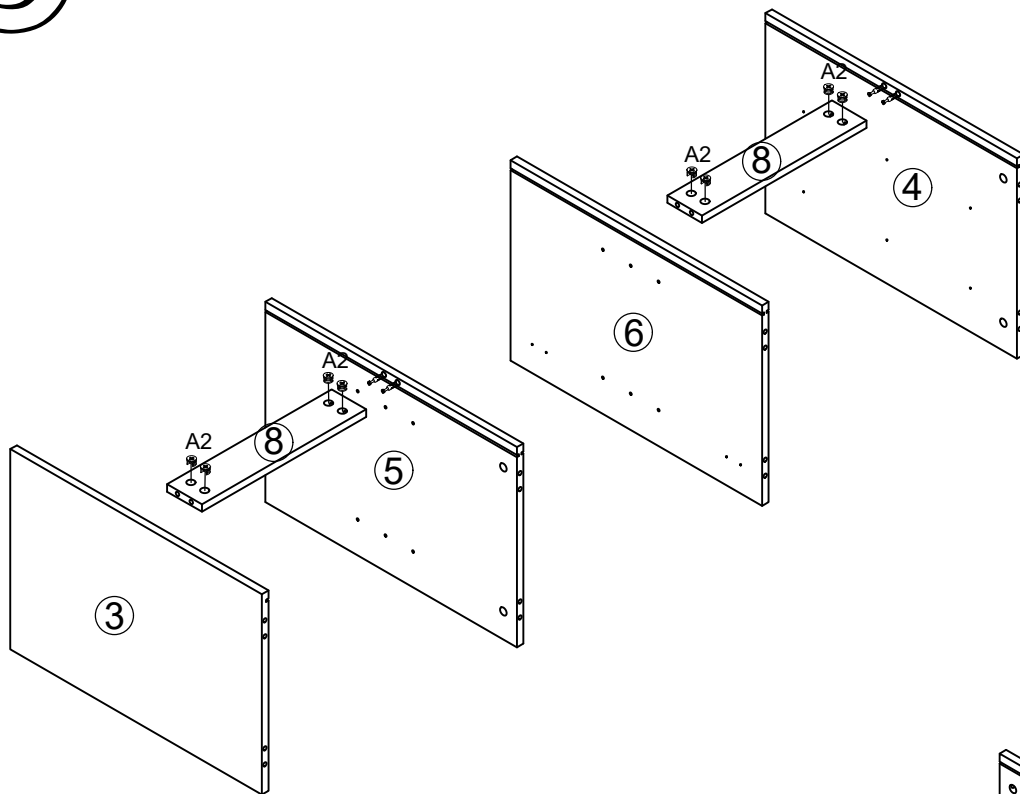

- (EN) Make sure that the arrow on the minifix body (A2) is faced to the hole of the board which will be assembled.
 (ES) Asegúrese de que la flecha de la excéntrica (pieza A2) tiene que estar orientada a la perforación del tablero al cual se va a unir.
 (NL) Let op: De pijl op de excentrische meubelverbinder (onderdeel A2) moet gericht zijn naar de boring van het paneel waarop hij moet worden bevestigd.
 (DE) Hinweis: Der Pfeil auf dem exzentrischen Möbelverbinder (A2) muss auf die Bohrung der Platte zeigen, an der er befestigt werden soll.
 (PT) Tenha certeza de que a seta do excêntrico (peça A2) deve estar orientada para a perfuração da tábua à qual vai unir-se.
 (FR) Assurez-vous que la flèche de l'excentrique (pièce A2) doit être orientée vers la perforation de la planche à laquelle elle va être jointe.
 (IT) Assicursarsi che la freccia dell'eccentrico (pezzo A2) sia orientata alla perforazione del pannello a cui andrà ad unirsi.



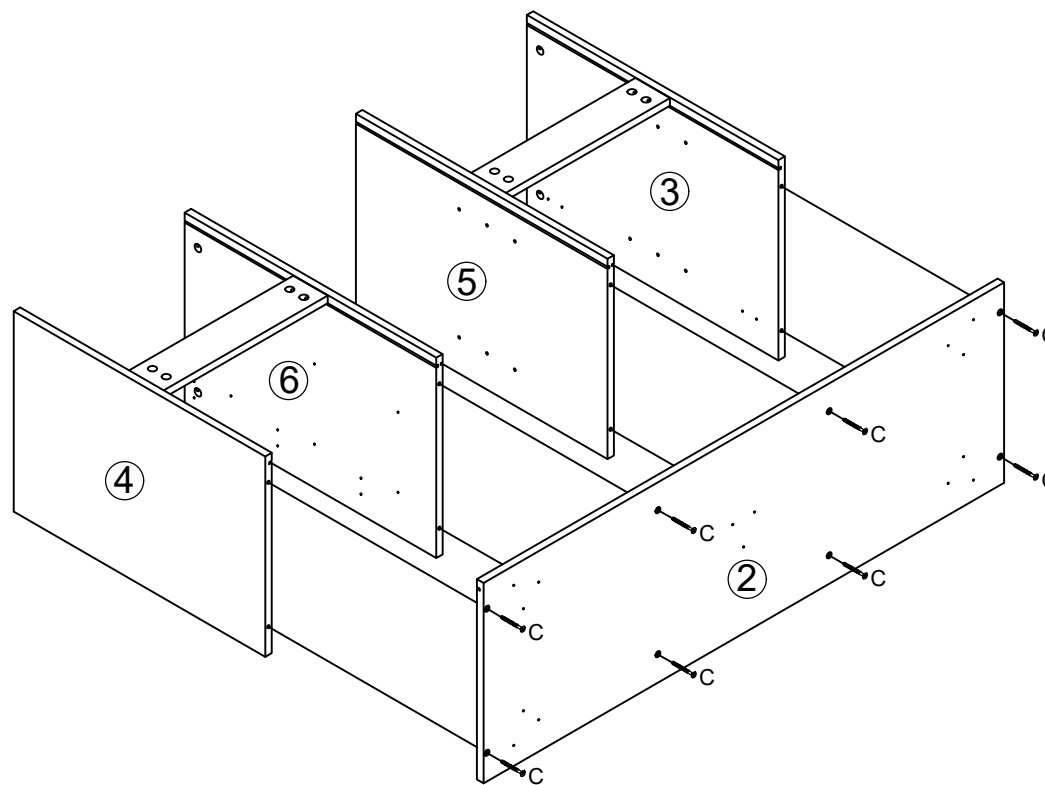



A2*8




C*8

4

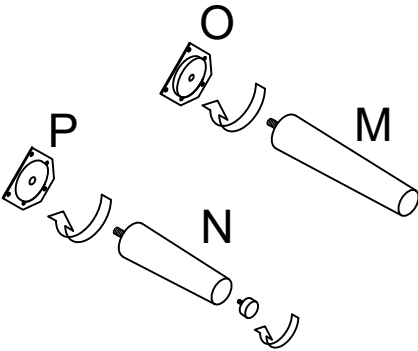
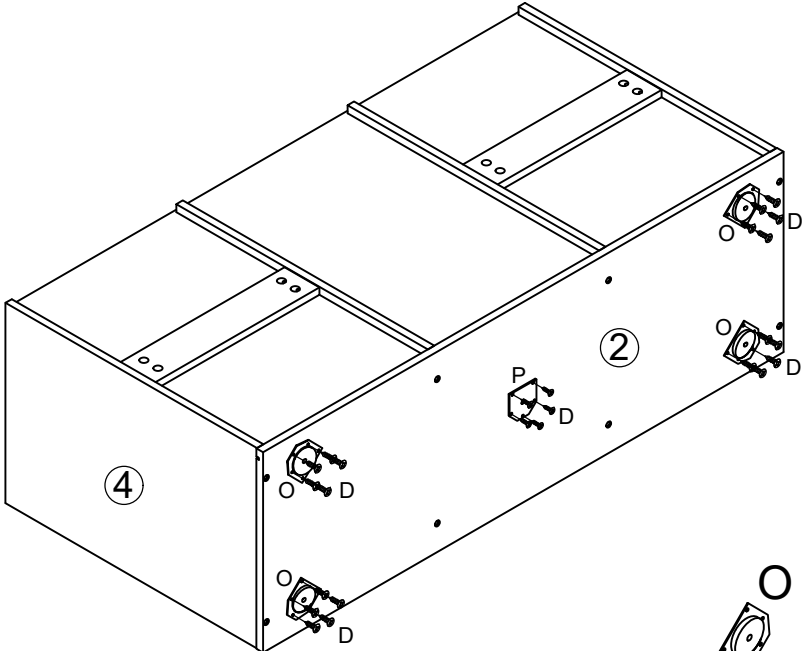
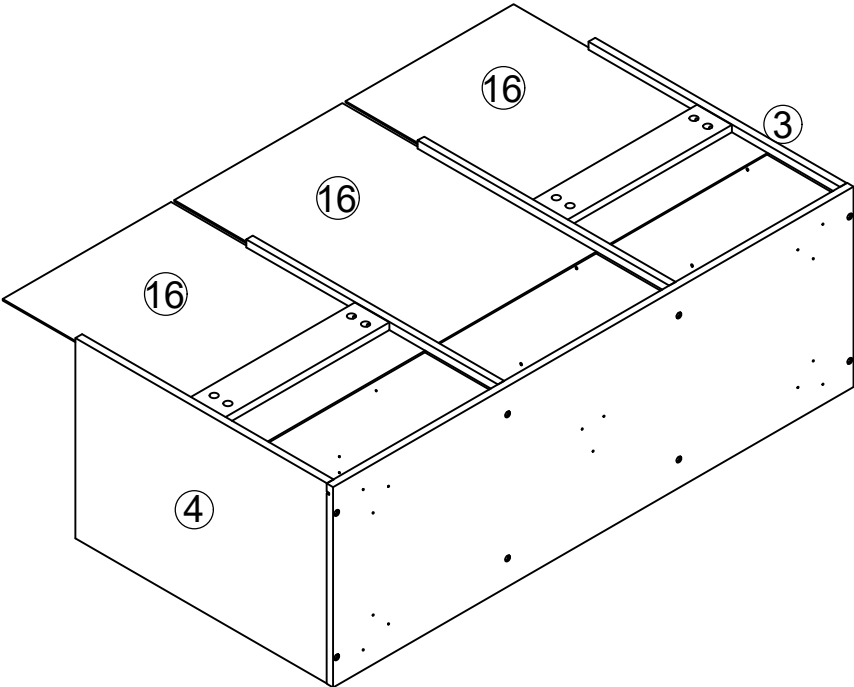


	D*25
	M*4
	N*1
	O*4
	P*1

This diagram illustrates the final step of the assembly process. The top panel (1) is being attached to the side panels (3, 4, 5, 6). Screws (A2) are used to secure the top panel to the side panels, and brackets (B) are used to reinforce the joints. The diagram shows the top panel being lowered into place, with the screws and brackets being inserted into the pre-drilled holes and slots.


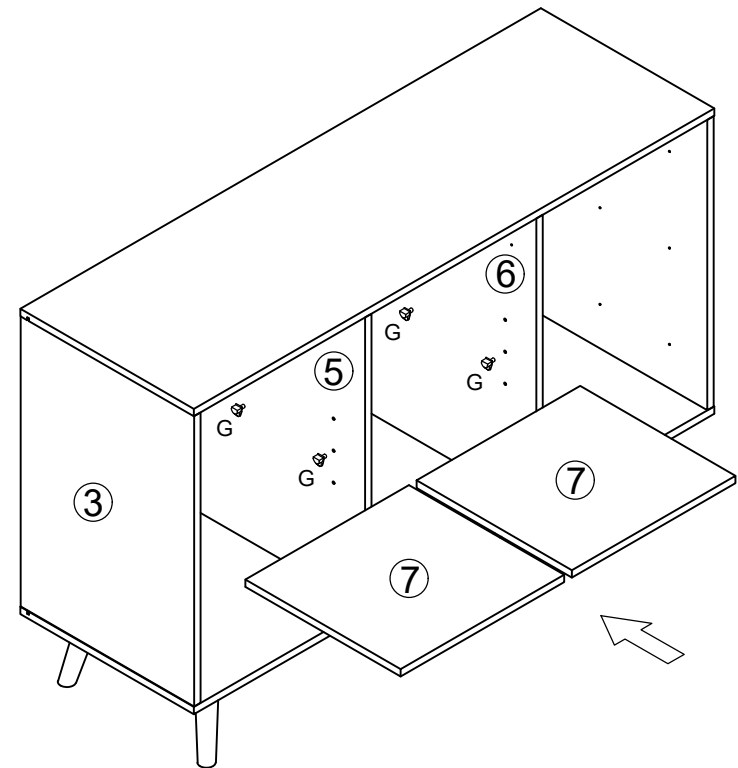


6

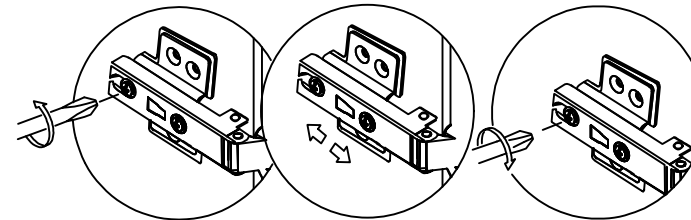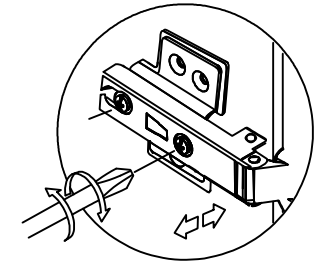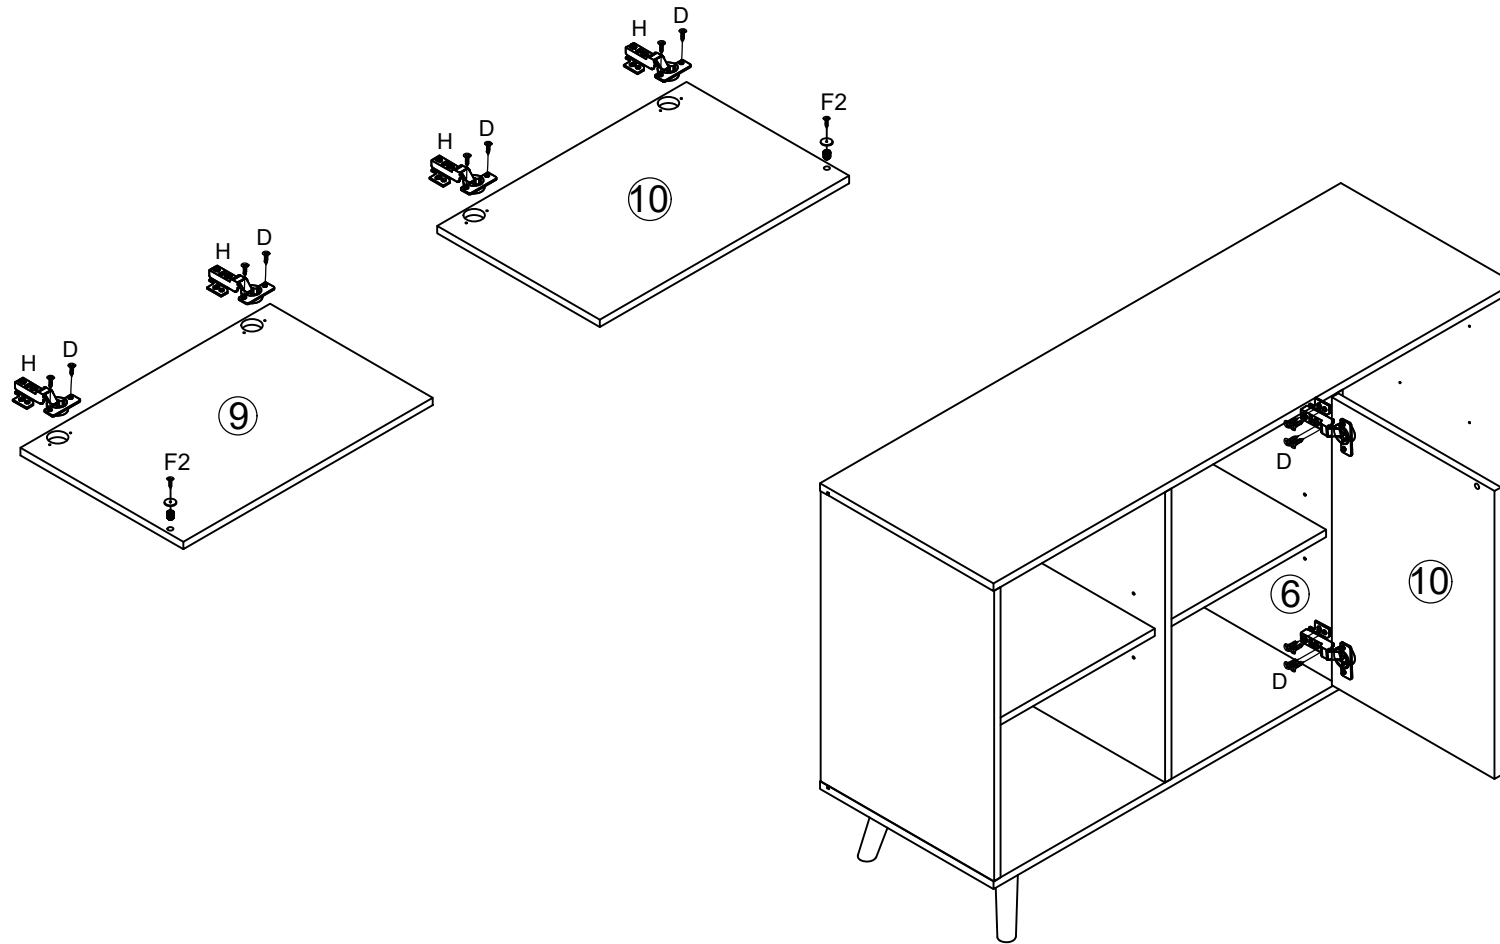

	D*16
	F2*2
	H*4

7

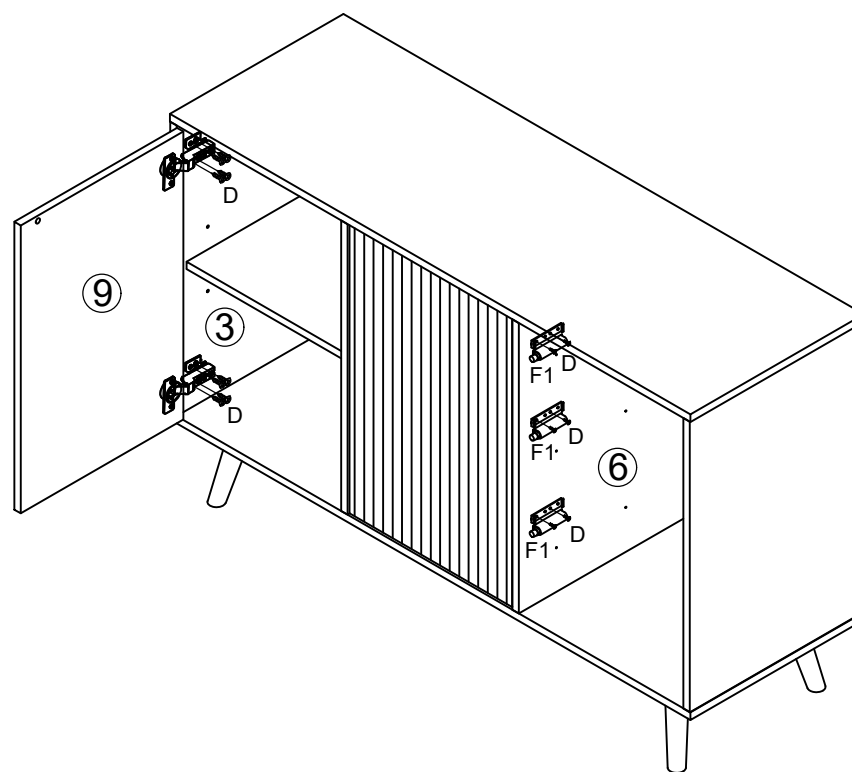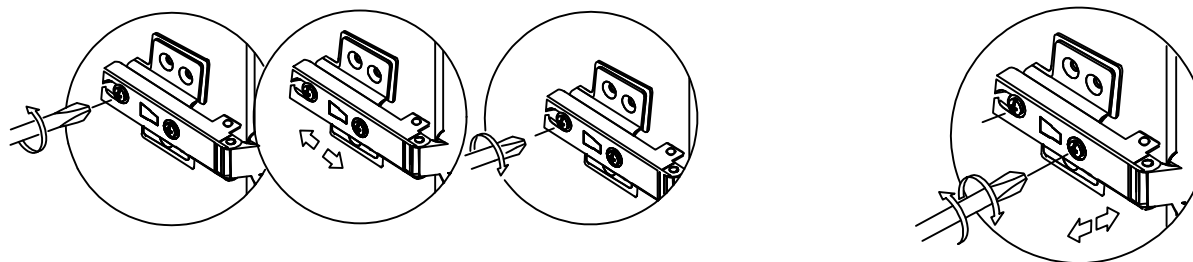





D*14



F1*3

8

X3

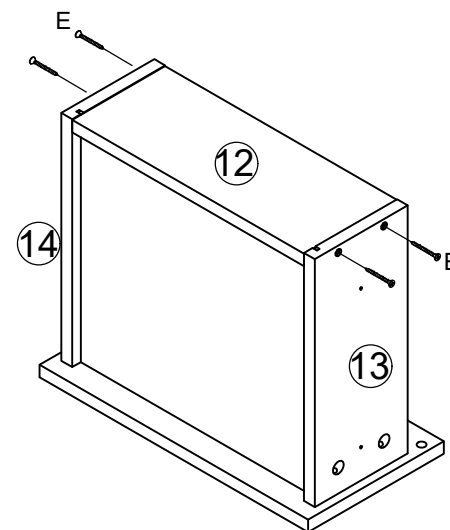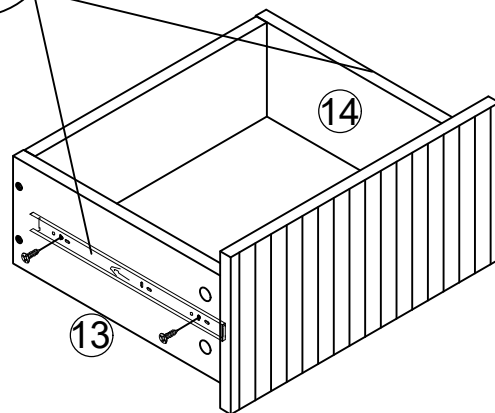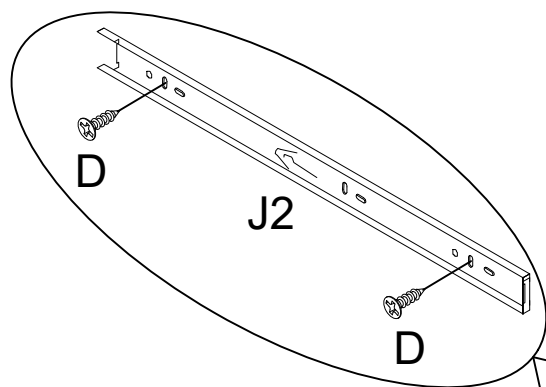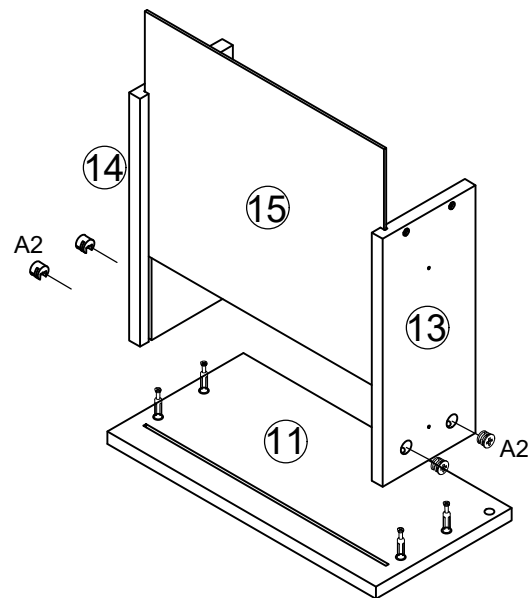

A2*12



D*12





E*12



J2*3

9

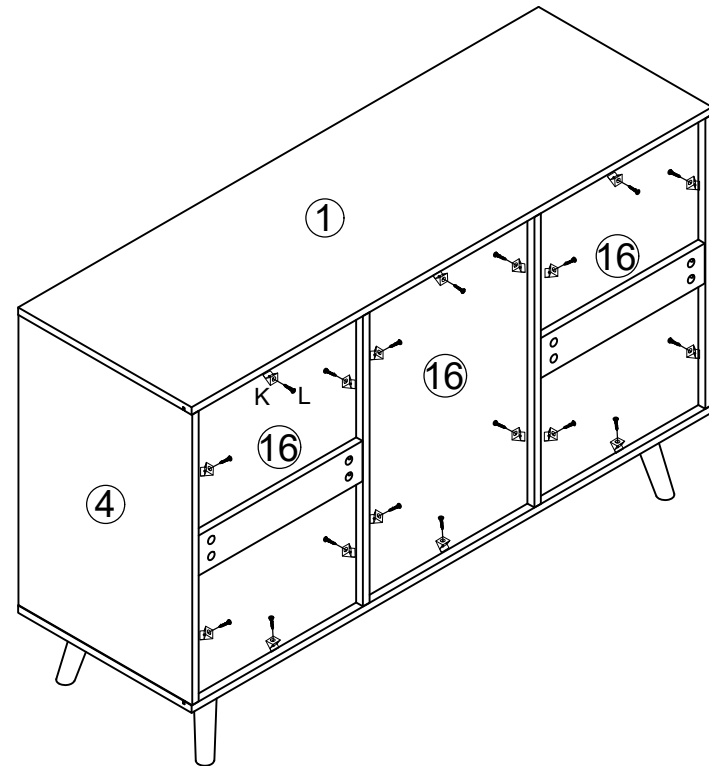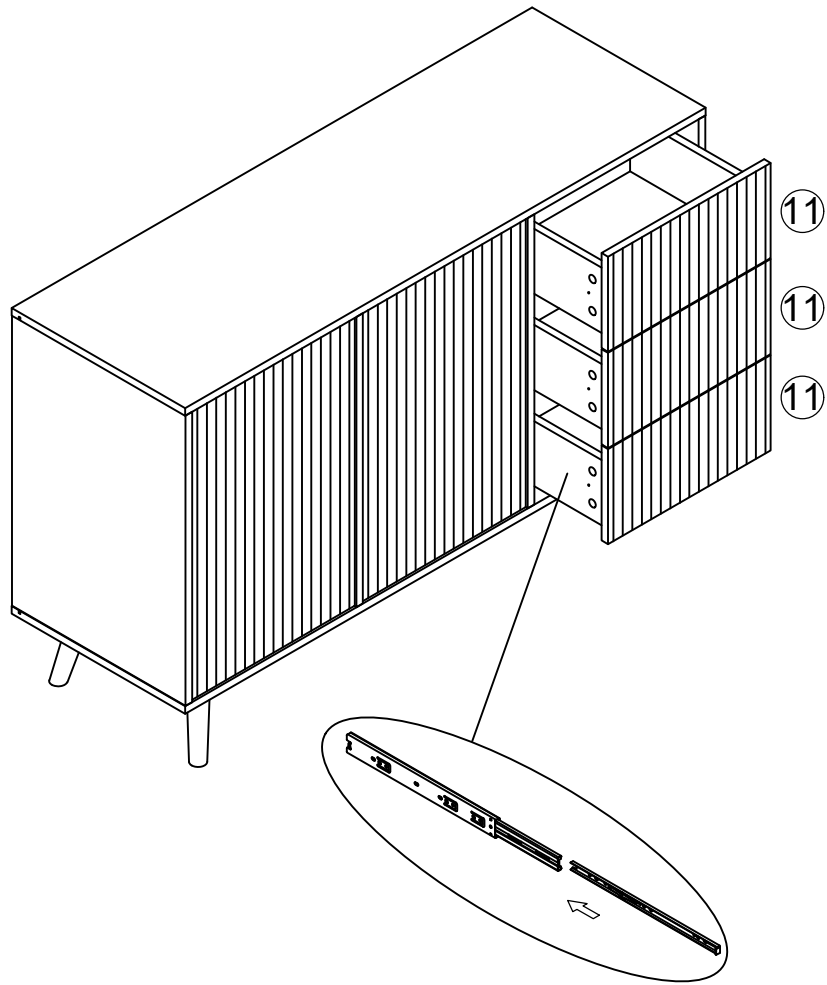

K*18



L*18

10

(EN) Install the Wall Anchor Mounting Point It's mandatory to anchor it to the wall (either at the top or bottom of the furniture)

(ES) Dispositivo antivuelco. Es obligatorio anclarlo a la pared (en la parte superior o inferior del mueble)

(FR) Il doit être fixé au mur (en haut ou en bas du meuble)


(IT) Dispositivo antiribaltamento. È obbligatorio fissarlo alla parete (nella parte superiore o inferiore del mobile)

(PT) Dispositivo antitombamento. É obrigatório fixá-lo a parede (na parte superior ou inferior do móvel)

(NU) Het is verplicht om het aan de muur te verankeren (aan de boven- of onderkant van het meubel)


(DE) Es ist obligatorisch, es an der Wand zu verankern (am oberen oder unteren Teil des Möbels)

STEP1

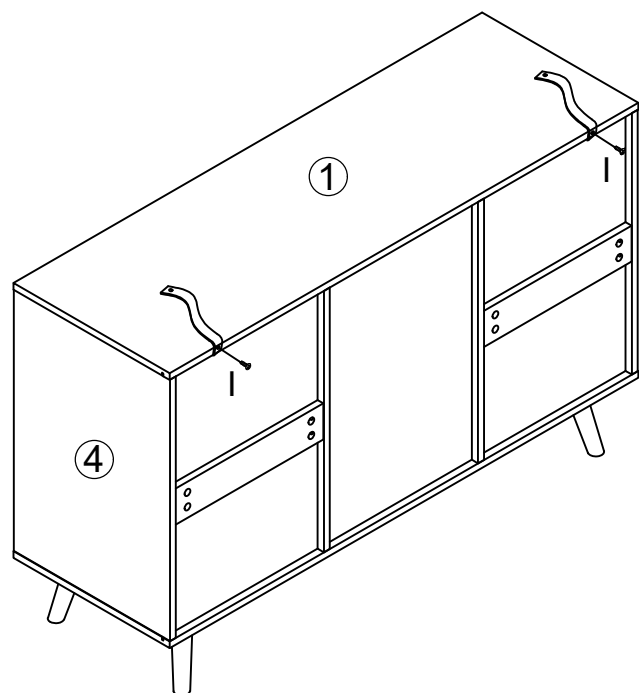

STEP2

WALL

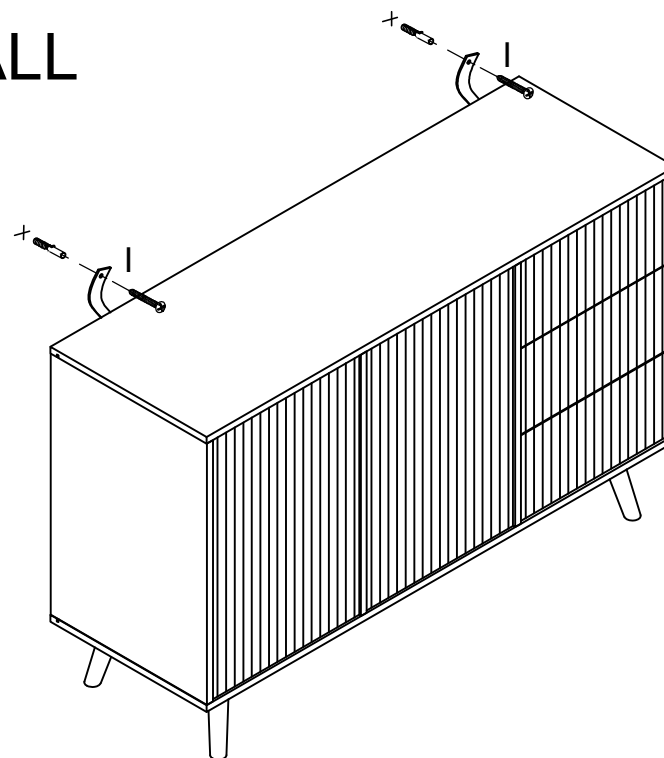

1*2